

How to use:

Connect the power supply and the load, you can supply to the controller,

Is displayed as a measured temperature,

Press the SET button, the display flashes the temperature,

Press - to set the desired temperature,

After setting press SET to confirm return,

The controller automatically performs the relay by setting off!

Lights, LED status descriptions:

Indicator: Off The relay is switched off, Always indicate the relay is closed.

LED: Shows LL is the sensor open, showing ?HH is out of range, the thermostat will be forced to close the relay, the display --- as high temperature protection.